



INSTALLATION AND SERVICE MANUAL



For installation of Mustang small HP LED.
Model. UMS-91131-32, UMS-91161-62, UMS-91191-92, UMS-91201-02 (SFMB).



Product drawing (dimensions)

SUITABLE FOR WET LOCATIONS


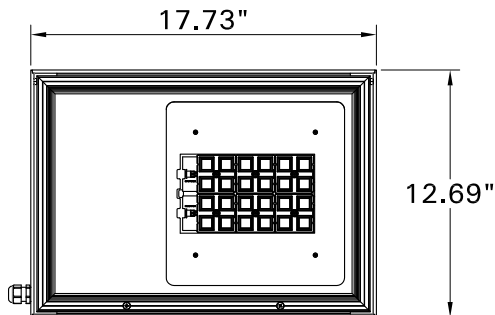
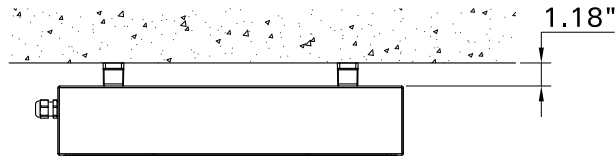


BOTTOM VIEW

UMS-91131-91132 UMS-91161-91162
UMS-91191-91192 UMS-91201-91202

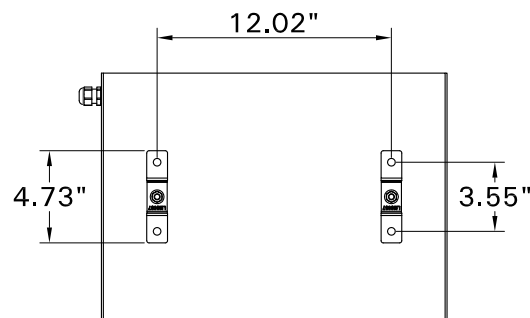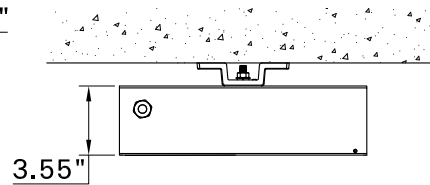

MOUNTING DETAIL

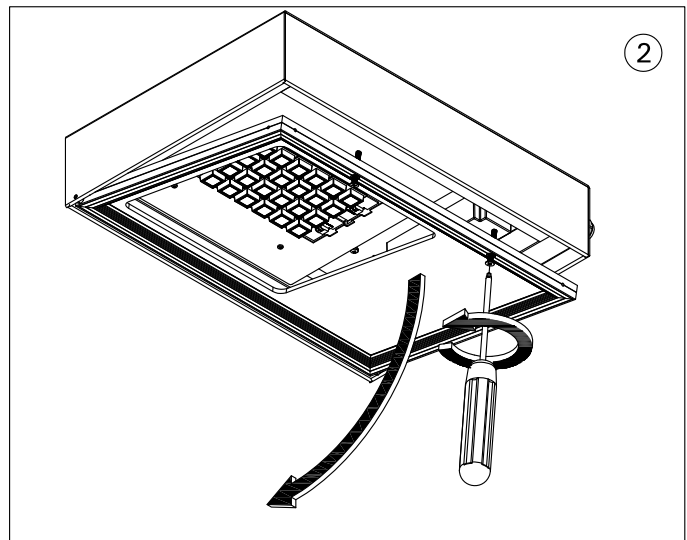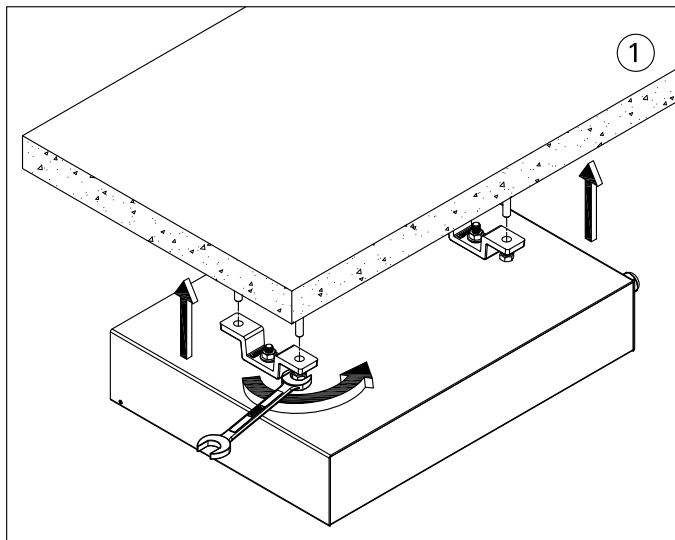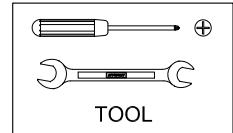

Notice to installer :

- 1.WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
- 2.This fixture has a VOLTAGE SPECIFIC BALLAST**,Check that the supply voltage is the same as the installed ballast voltage.

Ligman Lighting USA

Tanasbourne Commerce Center
3302 Nw 211th Terrace
Hillsboro Oregon 97124
Tel : 503-645-0500, Fax : 503-645-8100

www.ligmanlightingusa.com



