

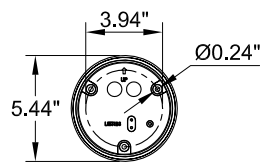
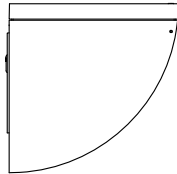


# INSTALLATION AND SERVICE MANUAL

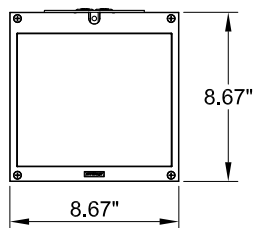


For installation of Quarter 1 wall washer.  
Model. UQU-31321-31328, UQU-31331-31332, UQU-31341-31342.



## Product drawing (dimensions) SUITABLE FOR WET LOCATIONS

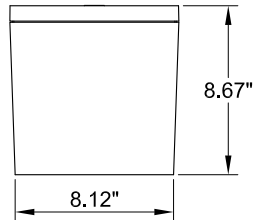


MOUNTING DETAIL

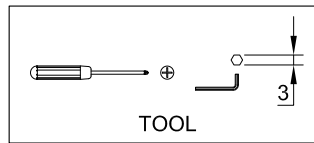


TOOL

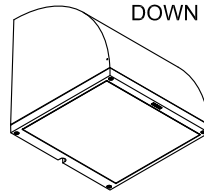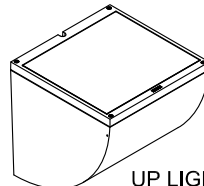


NOTE  
Mounts over  
a 3" Octagonal  
Junction box.

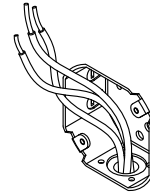

1

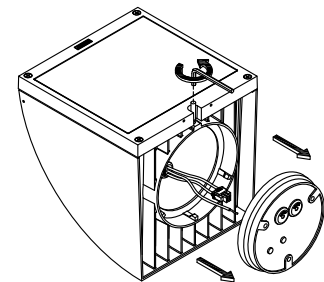


2

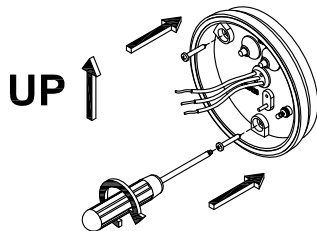

Center the Back Plate over the J Box  
and Secure the back plate to the wall


3

Connect Power and  
Ground Wire.

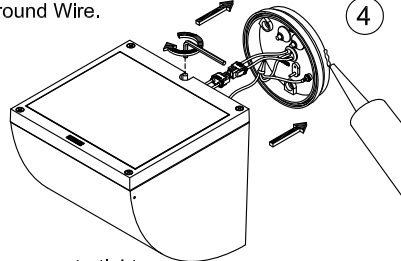


Ensure watertight  
seal using UL approved silicone based sealant.

4

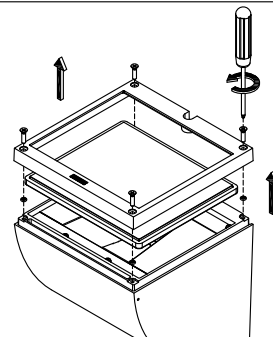


5


Install the Lamp

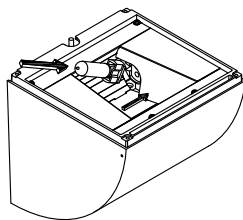

6

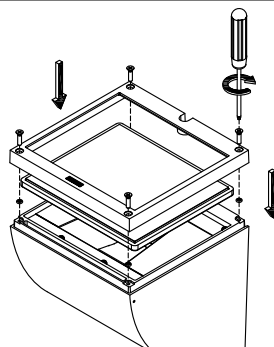

7

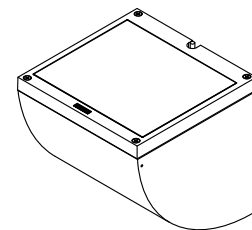

8

## Notice to installer :

- 1. WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
- 2. This fixture has a VOLTAGE SPECIFIC BALLAST, Check that the supply voltage is the same as the installed ballast voltage.**

Ligman Lighting USA

7144 NW Progress Court, Hillsboro  
Oregon, 97124, USA  
Tel : 503 645 0500 | Fax : 503 645 8100

www.ligmanlightingusa.com

UQU-31321/05/07/14/REV.1  
1/1

ISO 9001  
ISO 14001  
BUREAU VERITAS  
Certification



FM-TS-13/25-05-2007-REV.2