


# INSTALLATION AND SERVICE MANUAL


**LIGMAN**  
LIGHTING USA

For Installation of Tango Wall Surface Luminaire LED  
Model. UTA-31861, UTA-31871, UTA-31881 and UTA-31891


## Product drawing (dimensions) SUITABLE FOR WET LOCATIONS

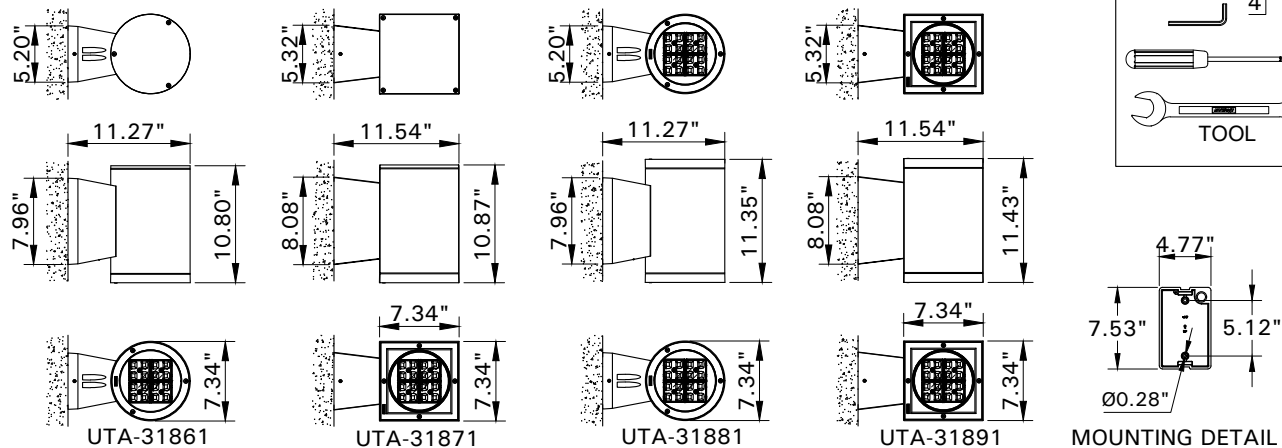


**NOTE**  
Mounts over  
a 3" Octagonal  
Junction box.

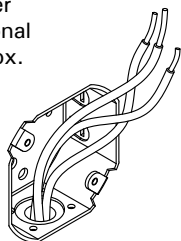

1

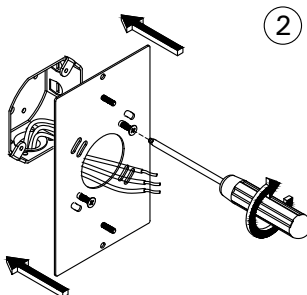

2

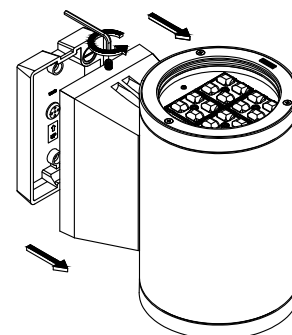


3

Using the nylon washers  
and the 7mm. nut driver  
secure the back  
plate to the wall

UP


4

Ensure watertight seal using UL  
approved silicone based sealant.

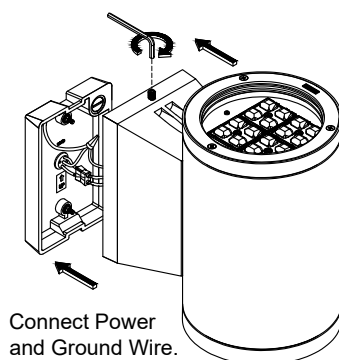

5

Connect Power  
and Ground Wire.

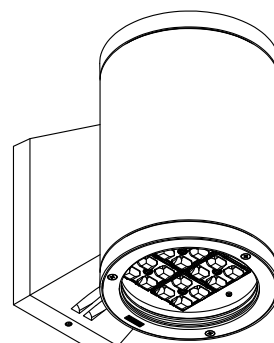

6

### Notice to installer :

- 1. WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
- 2. This fixture has a VOLTAGE SPECIFIC BALLAST, Check that the supply voltage is the same as the installed ballast voltage.**

**Ligman Lighting USA**

7144 NE Progress Court, Hillsboro  
Oregon, 97124, USA  
Tel : 503 645 0500 | Fax : 503 645 8100