
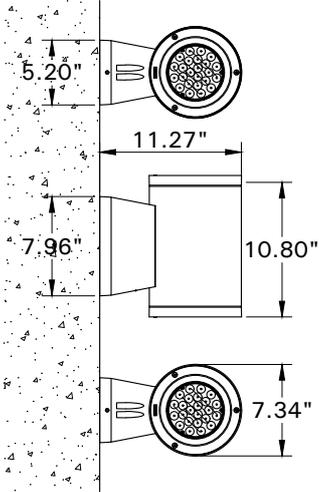
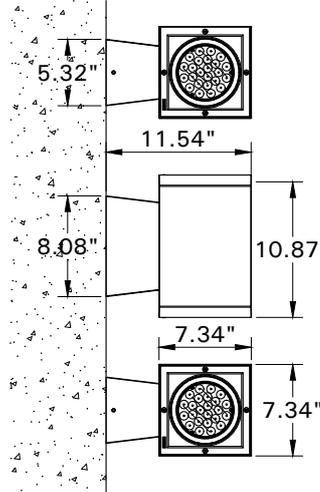
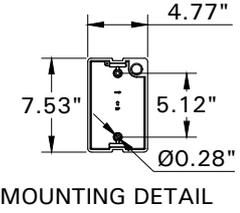
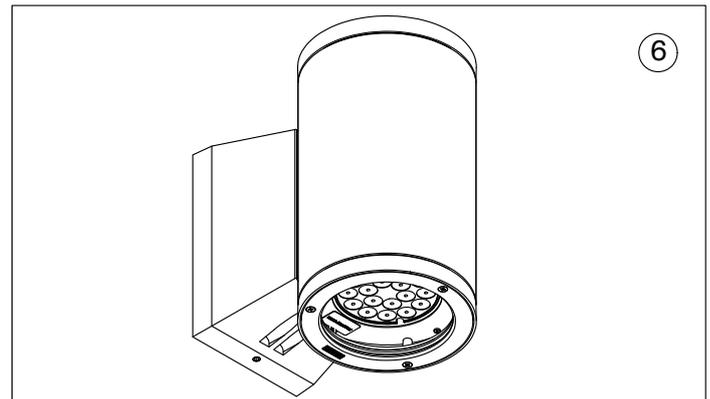
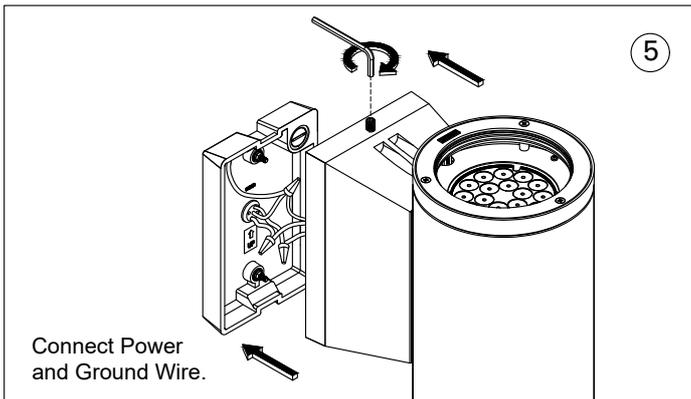
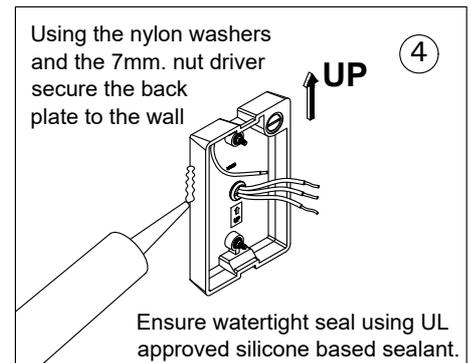
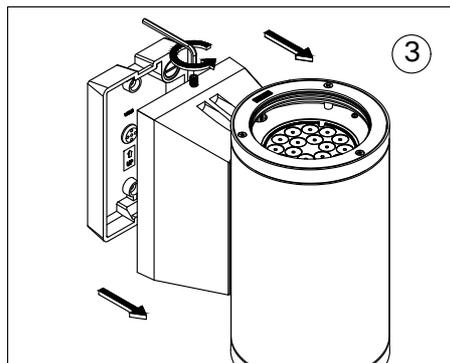


INSTALLATION AND SERVICE MANUAL

For Installation of Tango cylindrical square wall down light LED.
Model. UTA-31831 , UTA-31851

Product drawing (dimensions)		SUITABLE FOR WET LOCATIONS		NOTE Mounts over Junction box. ①
 <p>UTA-31831</p>	 <p>UTA-31851</p>	 <p>MOUNTING DETAIL</p>		

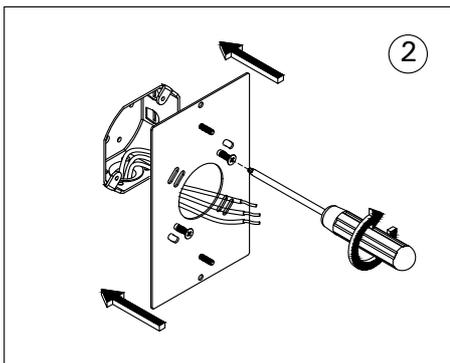

Notice to installer :

1. **WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
2. This fixture has a **VOLTAGE SPECIFIC BALLAST**, Check that the supply voltage is the same as the installed ballast voltage.

Ligman Lighting USA