


# INSTALLATION AND SERVICE MANUAL









## For Installation of Tango Cylindrical & Square Wall LED+Round Pole Adepter ( RPA) Model. UTA-318XX+RPA

### Product drawing (dimensions)

SUITABLE FOR WET LOCATIONS

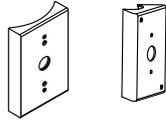

Round Pole Adepter(RPA)

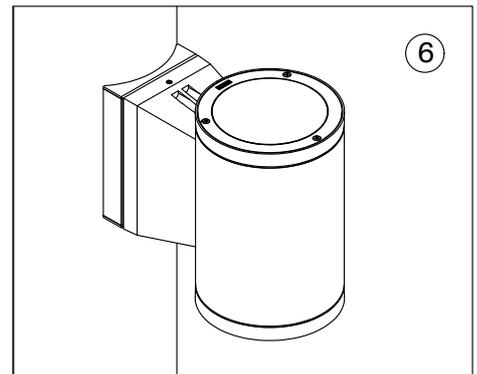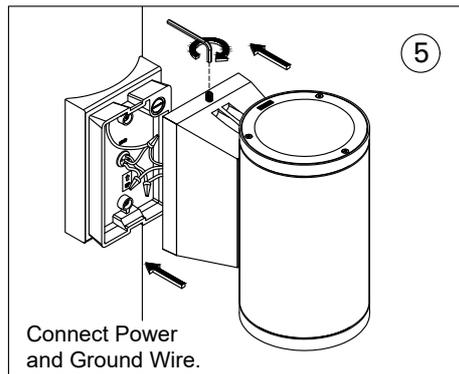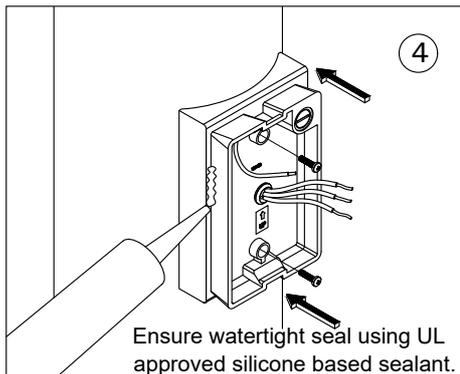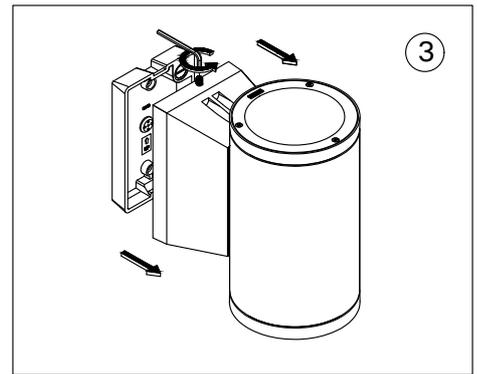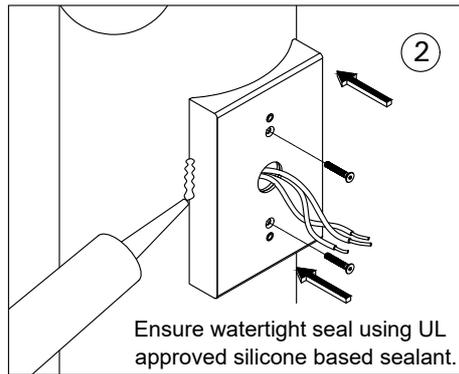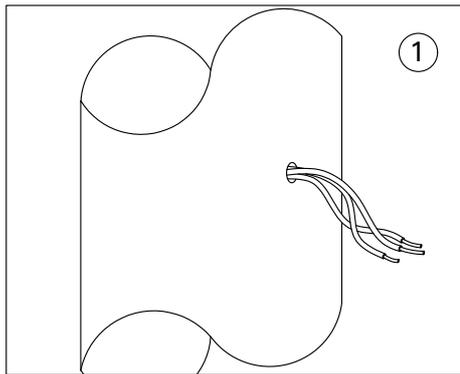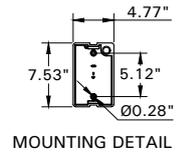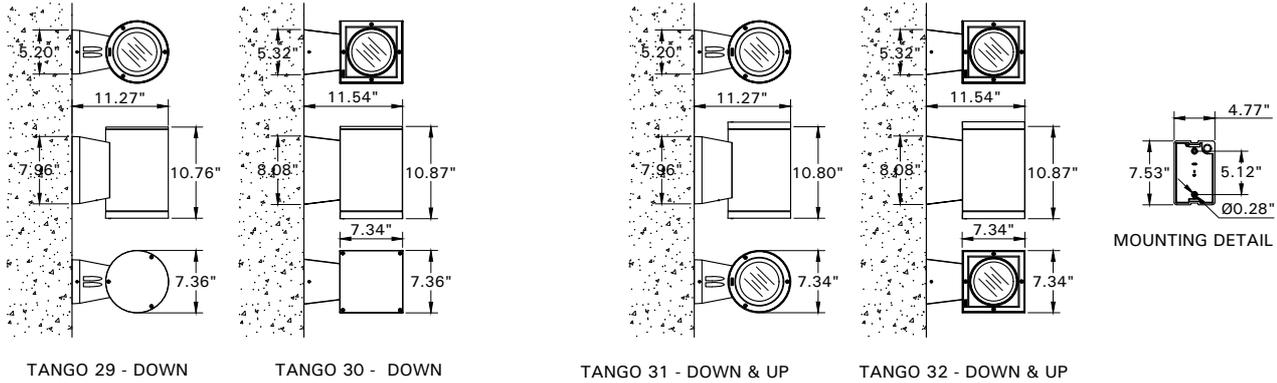

**Notice to installer :**

1. **WIRING INSTRUCTIONS Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY**>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
2. **This fixture has a VOLTAGE SPECIFIC BALLAST, Check that the supply voltage is the same as the installed ballast voltage.**

## Ligman Lighting USA

7144 NE Progress Court, Hillsboro  
Oregon, 97124, USA  
Tel : 503 645 0500 | Fax : 503 645 8100