

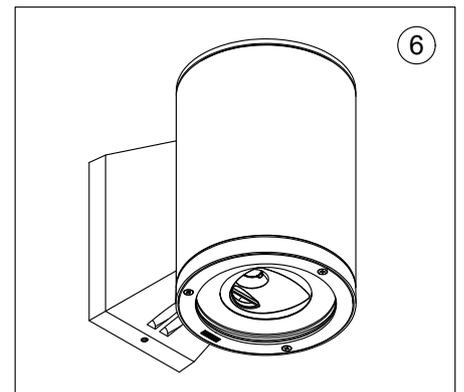
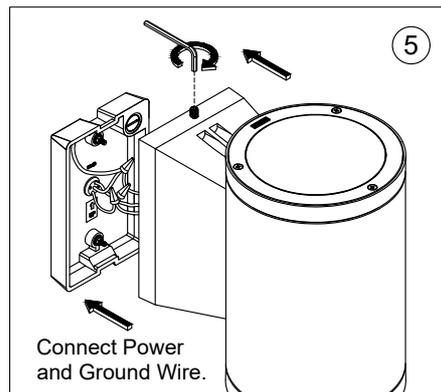
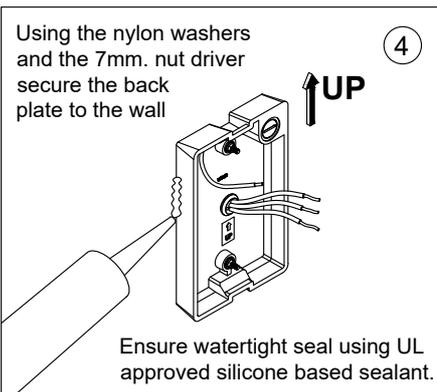
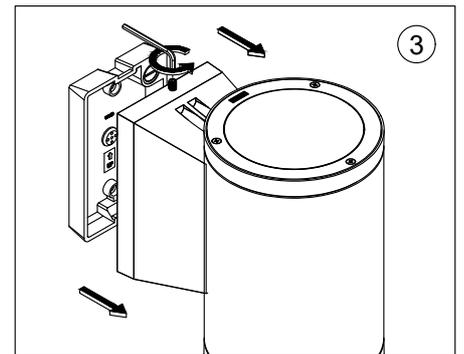
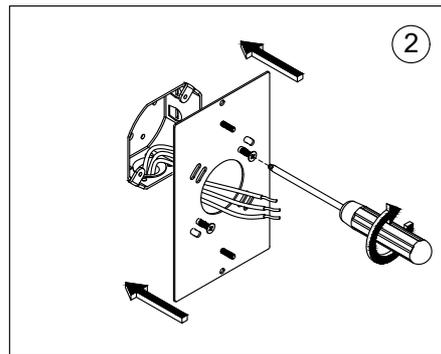


INSTALLATION AND SERVICE MANUAL

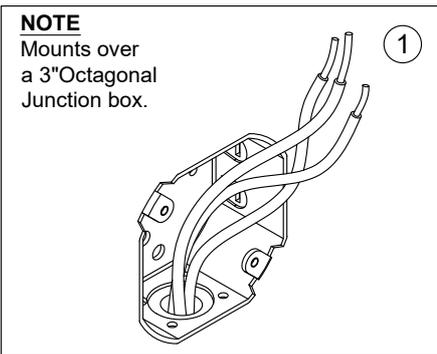

For Installation of Tango wall surface luminaire LED
 Model. UTA-31862, UTA-31863, UTA-31872, UTA-31873, UTA-31883, UTA-31893

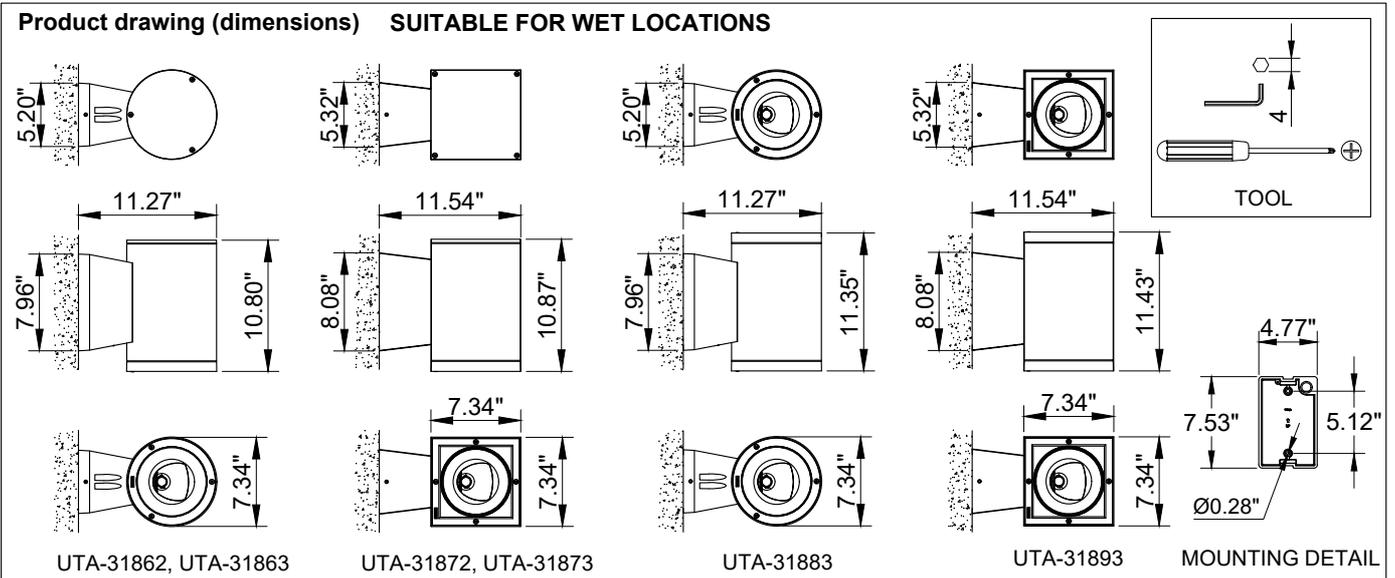

Notice to installer :

- 1.WIRING INSTRUCTIONS Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.**
- 2.This fixture has a VOLTAGE SPECIFIC BALLAST,Check that the supply voltage is the same as the installed ballast voltage.**

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
 Oregon, 97124, USA
 Tel : 503 645 0500 | Fax : 503 645 8100