



INSTALLATION AND SERVICE MANUAL

For installation of Tango wall surface luminaire LED
Model. UTA-31882, UTA-31892.


Product drawing (dimensions) SUITABLE FOR WET LOCATIONS

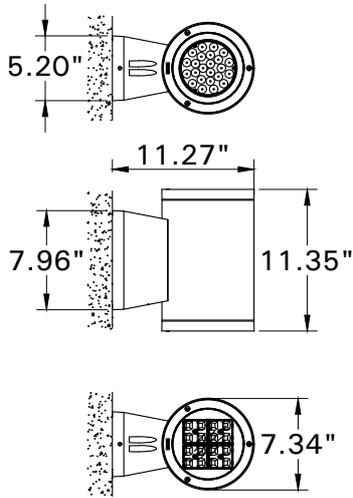


UTA-31882

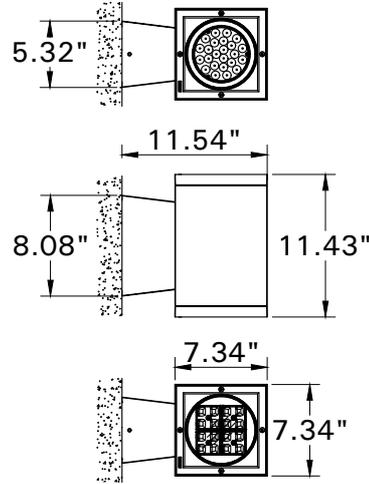


UTA-31892

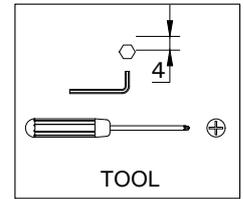


TOOL

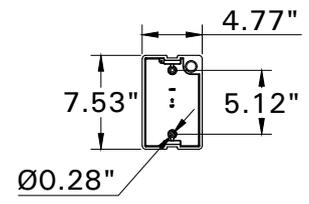


MOUNTING DETAIL

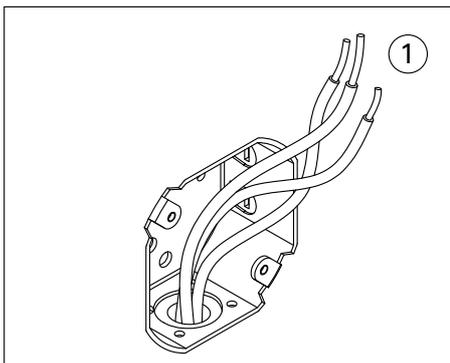


①

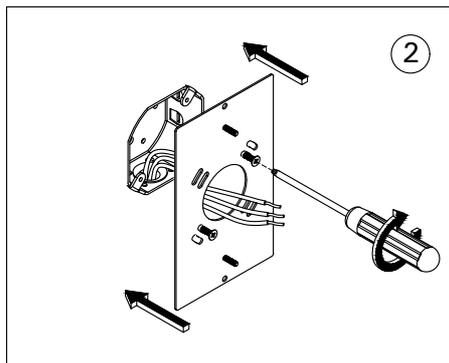

②

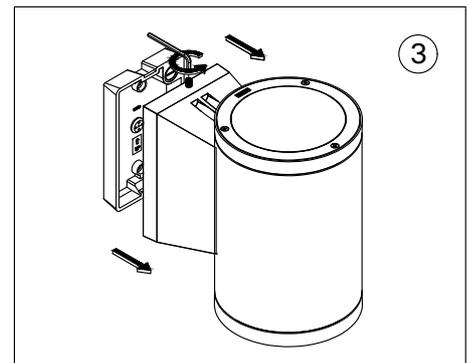


③

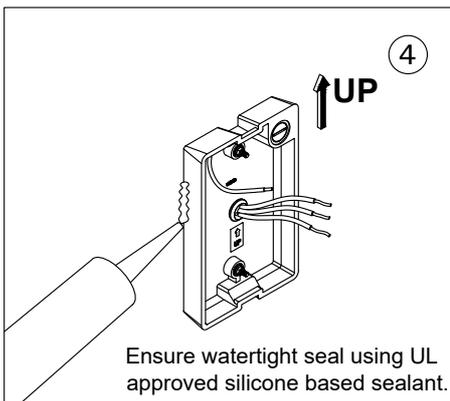


④

Ensure watertight seal using UL approved silicone based sealant.

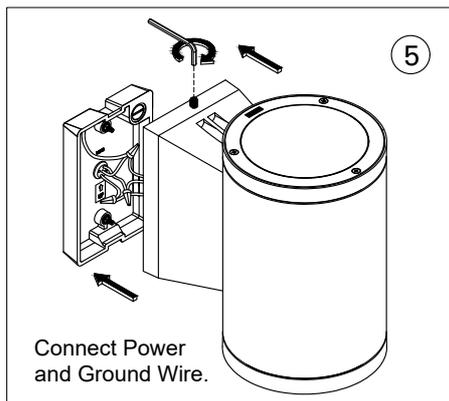

⑤

Connect Power and Ground Wire.

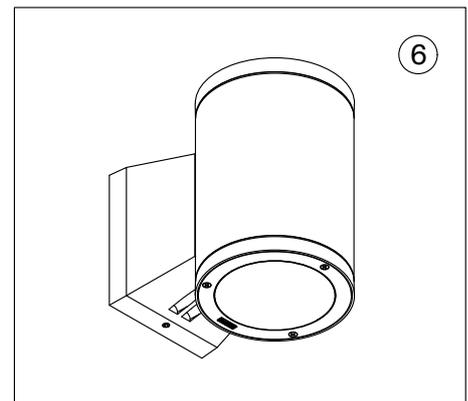

⑥

Notice to installer :

1. WIRING INSTRUCTIONS Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.

2. This fixture has a VOLTAGE SPECIFIC BALLAST, Check that the supply voltage is the same as the installed ballast voltage.

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100