


INSTALLATION AND SERVICE MANUAL

For Installation of Accessories Odessa 2 Medium LED.
Model. A80114, A80131, A80231.


PRODUCT DRAWING (DIMENSIONS)

SUITABLE FOR WET LOCATIONS


Floodlight (Yoke Mount) UOD-500011 , UOD-50012

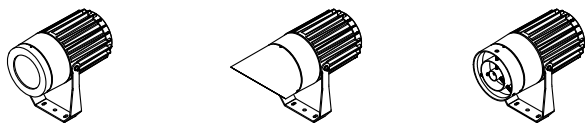

Floodlight (Pedestal Mount) UOD-50081 , UOD-50082

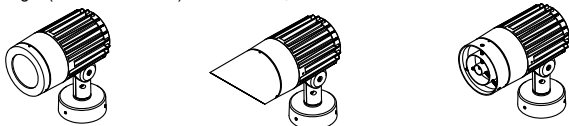

 Floodlight (Threaded Knuckle Mount (TKM)) UOD-50061 , UOD-50062




Linear spread lens
A80114

Anti-glare attachment
A80131

Anti-glare louvre
A80231


Unscrew 3 Screws
Holding Front Bezel
to Fixture Housing

①

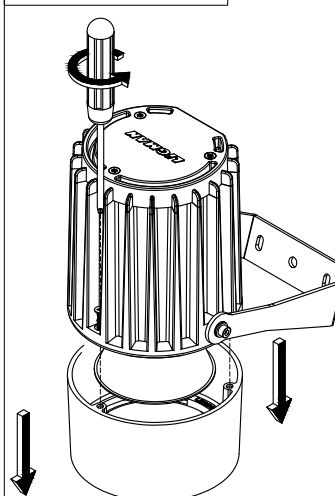


Remove Old Bezel

Replace with New Bezel
designed for Accessories ②

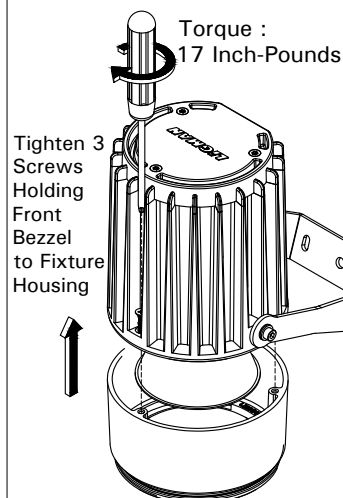


Ensure gasket is Properly Seated
between bezel and Fixture Housing

Torque :17 Inch-Pounds

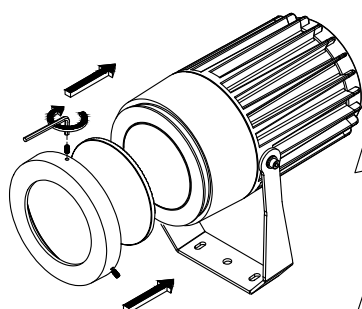


Linear spread lens

Torque :17 Inch-Pounds

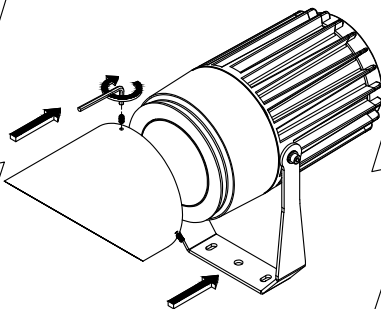

Anti-glare attachment

Torque :17 Inch-Pounds

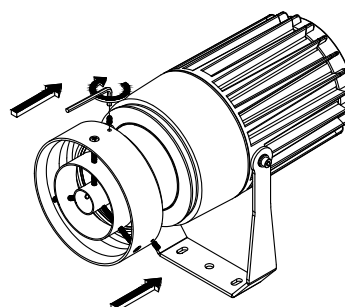


Anti-glare louvre

③

Slide Accessory
Option into
New Front
Bezel

Tighten the 3 set
Screws on
Accessory
Bezel

Torque :17 Inch-Pounds

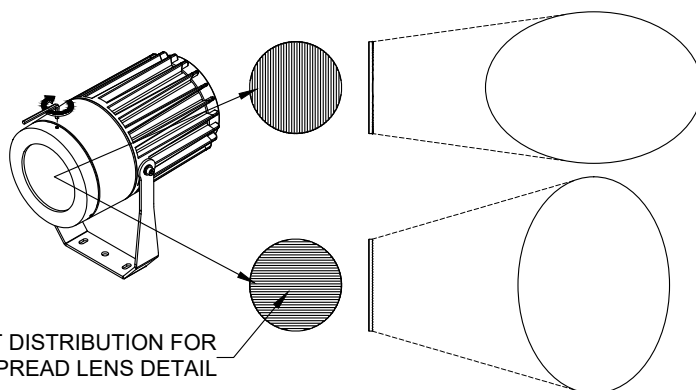

LIGHT DISTRIBUTION FOR
LINEAR SPREAD LENS DETAIL

④

Notice to installer :

1.WIRING INSTRUCTIONS Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100

www.ligmanlightingusa.com

A80114 06/05/25 REV.1
1/1

FM-TS-13-2/21-03-2568/Rev.5