



For Installation of Accessories Quantum 2 QA-50011 Floodlight, projector Model. A51714,A53831 and A53931


Product drawing (dimensions)

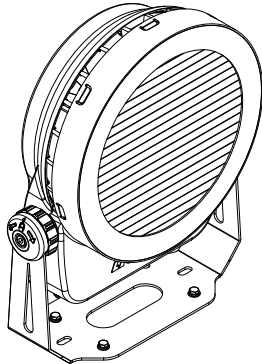


A51714
Linears spread lens

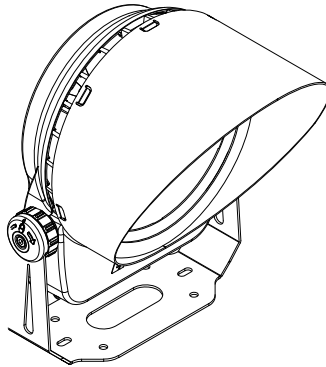


A53831
Anti glare visor

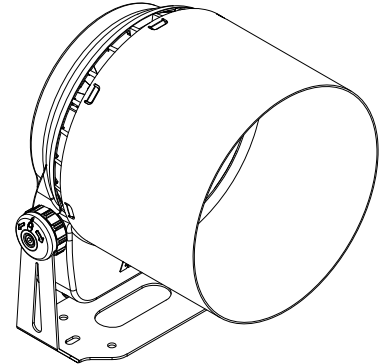


A53931
Anti glare hood

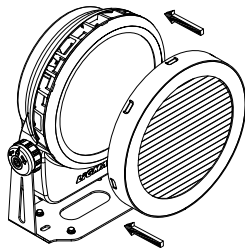

Linears spread lens

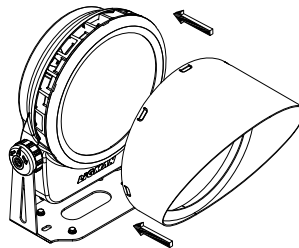


Anti glare visor

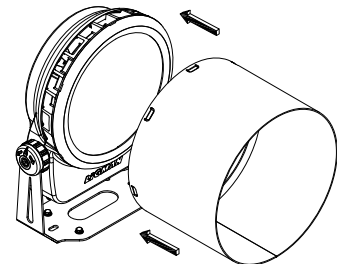


Anti glare hood

2

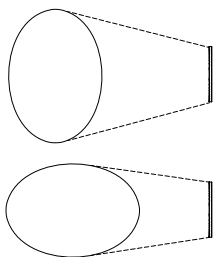


Linears spread lens

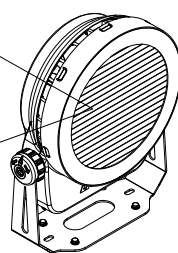

LIGHT DISTRIBUTION FOR
LINEAR SPREAD LENS DETAIL

3

ADJUST

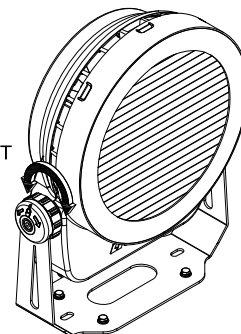

4

Notice to installer :

1. **WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
2. This fixture has a **VOLTAGE SPECIFIC BALLAST**, Check that the supply voltage is the same as the installed ballast voltage.

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100