

For installation of Benton Light column dia. 6.3" & 8.9".
Model. UBE-20001 and UBE-20011.

Product drawing (dimensions) SUITABLE FOR WET LOCATIONS

UBE-20001 Dimensions:
 Total height: 59.1"
 Mounting height: 11.5"
 Column diameter: 6.3"
 Mounting base diameter: 12.21"
 Mounting detail: 11.82" (width), 9.46" (depth), 0.88" (height), 1.47" (radius), 6.69" (radius)

UBE-20011 Dimensions:
 Total height: 76.85"
 Mounting height: 14.75"
 Column diameter: 8.87"
 Mounting base diameter: 14.38"
 Mounting detail: 11.82" (width), 8.36" (depth), 0.88" (height)

TOOL: 2.5, 3 (screwdriver), 11.82" (wrench)

1 Connect Power and Ground Wire.

2 Preparing the mounting base and column.

3 Attaching the mounting base to the column.

4 Mounting the base to the wall with screws.

5 Final mounting and alignment.

6 Completed installation.

Notice to installer :

- 1.WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
- 2.This fixture has a VOLTAGE SPECIFIC BALLAST,Check that the supply voltage is the same as the installed ballast voltage.**

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100