

INSTALLATION AND SERVICE MANUAL






**For Installation of Benton 5 & 6 Pillar Light LED.
Model. UBE-70001 and UBE-70011**

Product drawing (dimensions)

SUITABLE FOR WET LOCATIONS

MOUNTING DETAIL

UBE-70001 UBE-70011

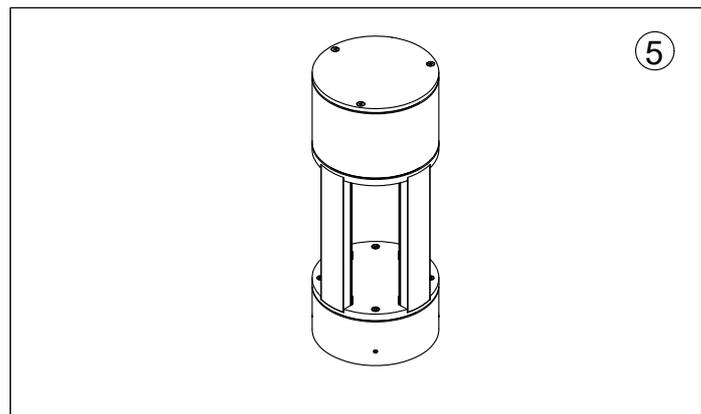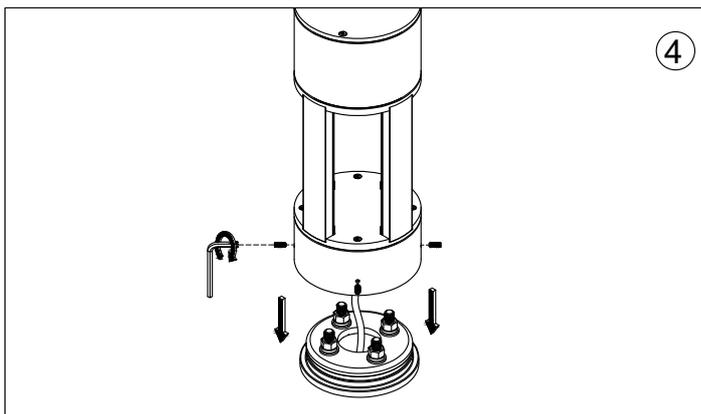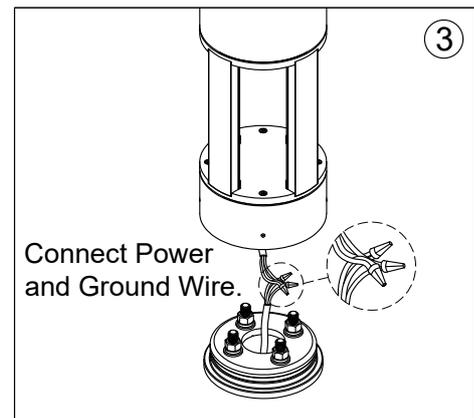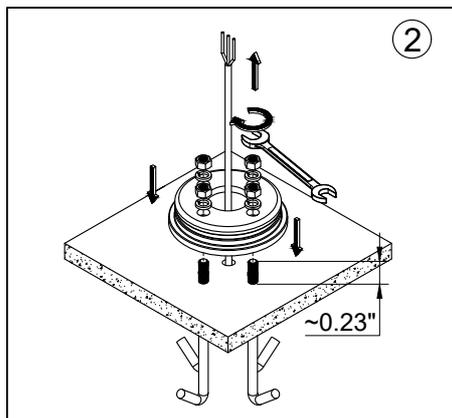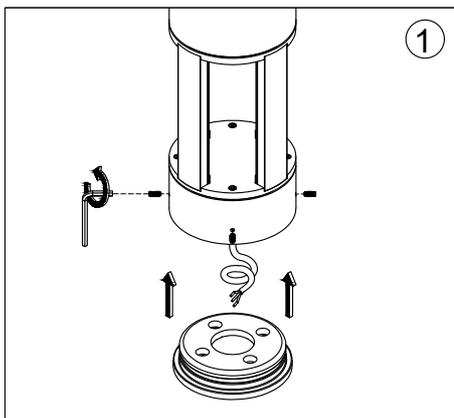

Notice to installer :

1. **WIRING INSTRUCTIONS Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.**
2. **This fixture has a VOLTAGE SPECIFIC BALLAST, Check that the supply voltage is the same as the installed ballast voltage.**

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100