
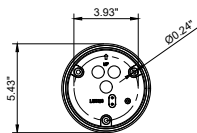


# INSTALLATION AND SERVICE MANUAL



For Installation of Austin Wall Washer LED For Surface Mounting & Motion Sensor .  
Model. UAU-30580-SCE-OCC.

## PRODUCT DRAWING (DIMENSIONS)

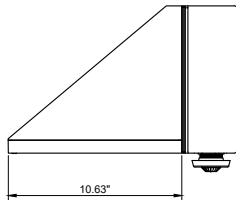


MOUNTING DETAIL

## SUITABLE FOR WET LOCATIONS

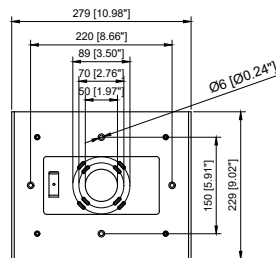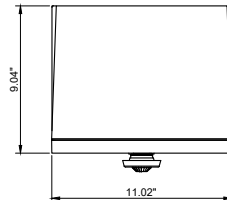


SMB BOX FOR SENSOR  
MOUNTING DETAIL


NOTE  
Mounts over  
Junction box.

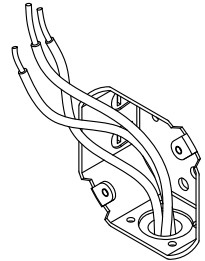


1

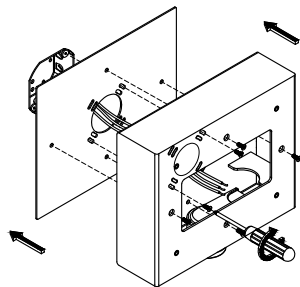

2

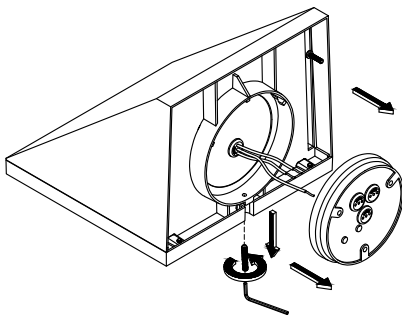


3

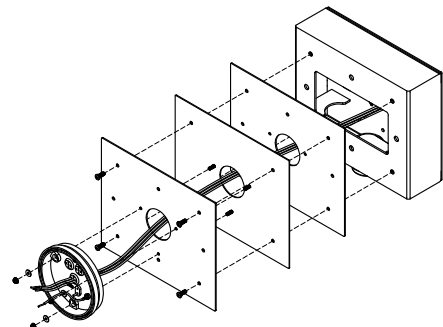


4

Connect Power and  
Ground Wire.

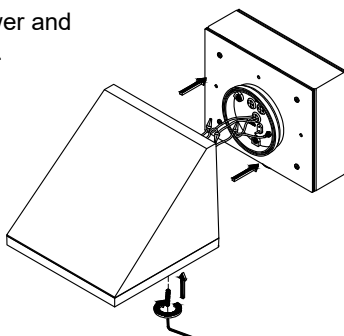

5

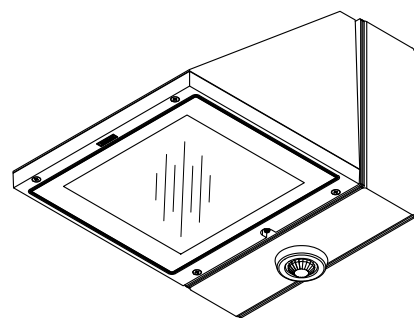

6

### Notice to installer :

1. **WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
2. This fixture has a **VOLTAGE SPECIFIC BALLAST**, Check that the supply voltage is the same as the installed ballast voltage.

**Ligman Lighting USA**

7144 NE Progress Court, Hillsboro  
Oregon, 97124, USA  
Tel : 503 645 0500 | Fax : 503 645 8100